

IQUILA

SOFTWARE DEFINED NETWORKS

iQuila Guide to Configuring a Cradlepoint Router in Netcloud

iQ22114r1

This Document Applies to:

iQuila Enterprise


iQuila Cloud

www.iQuila.com


Log into Cradlepoint netcloud.

<https://accounts.cradlepointecm.com/#/login>


1. In your dashboard, select “Devices”,
2. Select your dev

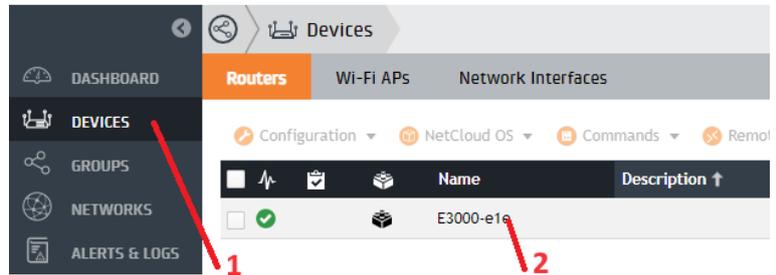


3. Select Configuration
4. Select Edit

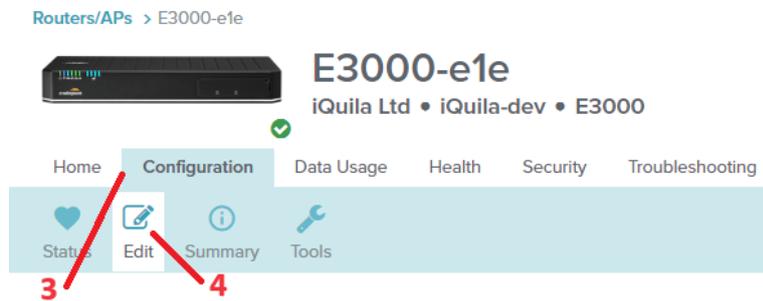


5. System
6. Containers
7. Projects

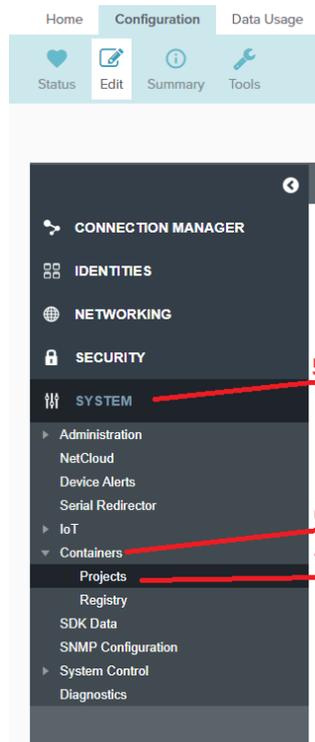


8. Add
9. Add

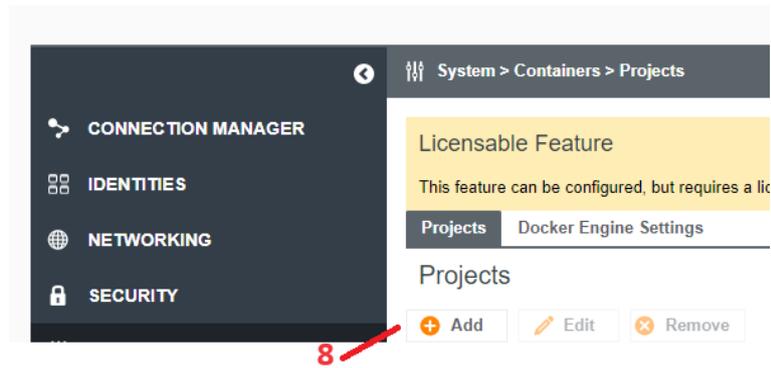


10. Configure a Name and set Update interval to 0
11. Select Compose

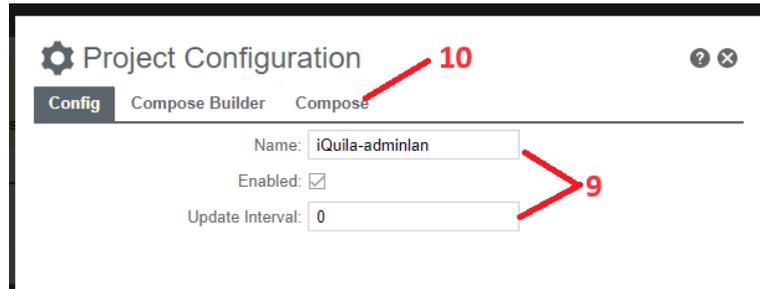

12. Paste config.
13. Ensure lannet ipv4_address is unique. This is how you will connect to your iQuila console
14. Ensure ipam subnet/gateway is correct for your network. Gateway will be your router IP.
15. Click Save

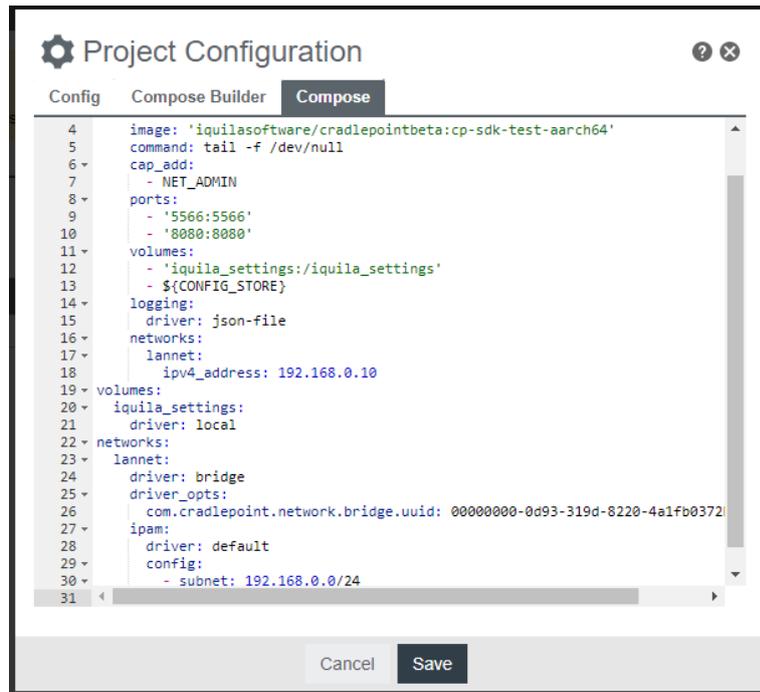

16. To Check the iQuila container is running select "Home".
17. Select "Containers"
18. Click anywhere on the Project to select, this enables the Start/Stop functions.

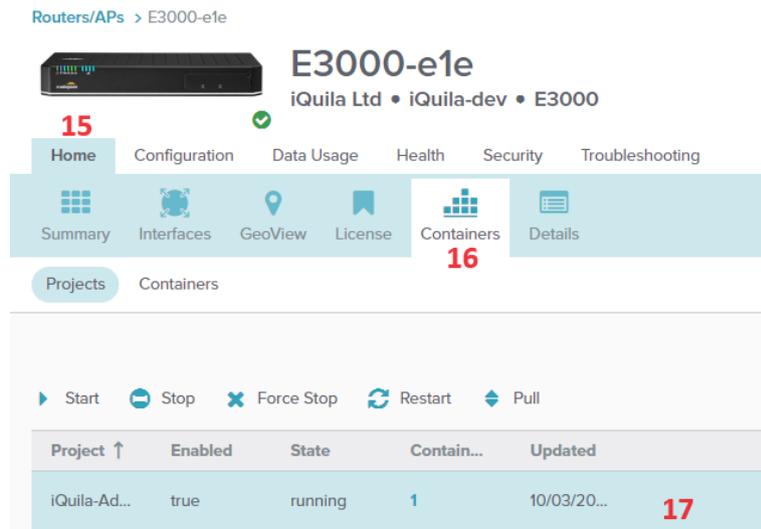

Access the iQuila via the unique IP address you have previously set.